ASSEMBLY INSTRUCTIONS & PARTS MANUAL

Standard Storage Cabinet with Recessed Handle Unassembled Model 1470RH or 1480RH



RETAIN INSTRUCTIONS FOR FUTURE REFERENCE





 EVENLY DISTRIBUTED

 UNIT SIZE
 WEIGHT CAPACITY

 36w x 18d
 200 lbs.

 36w x 24d
 200 lbs.

GENERAL SAFETY INFORMATION

Some parts may have sharp edges. CARE must be taken when handling various pieces to avoid injury. For safety, wear a pair of work gloves when assembling or performing any maintenance on products.

LIMITED WARRANTY

Tennsco warrants goods purchased hereunder to be free of defects in materials and workmanship for a period of one (1) year from the date of shipment, hereunder. This warranty shall not apply in the event goods are damaged as a result of misuse, abuse, neglect, accident, improper application, modification or repair by persons not authorized by Seller, where goods are damaged during shipment, or where the date stamps on the goods have been defaced, modified or removed. UNLESS CONSIDERED UNENFORCEABLE OR UNLAWFUL UNDER APPLICABLE LAW:

- a. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO WARRANTIES OR MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY EXCLUDED:
- b. BUYERS REMEDY, IF ANY, FOR ANY DEFECTIVE GOODS SHALL BE LIMITED TO A REFUND BY SELLER OR REPLACEMENT OF THE GOODS AT SELLER'S OPTION, AND SHALL IN NO EVENT INCLUDE DAMAGES OF ANY KIND, WHETHER INCIDENTAL, CONSEQUENTIAL OR OTHERWISE.

NO GOODS ACCEPTED FOR RETURN WITHOUT PRIOR APPROVAL. Seller shall have the right to inspect any goods claimed to be defective at Buyers place of business or require Buyer to return the goods to Seller for inspection on Seller's premises. Transportation charges covering returned goods will be borne by Seller only if such goods are proven to be defective, are covered by this warranty and are returned within the warranty period stated above.



ASSEMBLY OF 1470RH OR 1480RH CABINET

Tools Needed: A free 11/32" nut driver is included with each Tennsco cabinet. Two people are recommended for assembly. Approximate assembly time: 30-40 minutes.

1. The reference numbers used throughout this sheet refer to the illustration on the back cover. This is to help you to identify the various parts as they are mentioned.


NOTE: All illustrations show a solid door. Assembly for C-Thru doors (CVD1470/CVD1480) is identical.

2. Place the cabinet back (Ref. No. 1) on a protected surface to prevent scratching the paint.


The flange on the bottom of the back should be facing upward.

NOTE: When bolting the unit together, leave the bolts slightly loose until Step 8, unless otherwise specified.

3. Attach the left side (Ref. No. 2) to the back by placing flange (A) around the back and bolting together with seven bolts and nuts (Ref. Nos. 17 & 18). Be sure that the lances on all shelf adjustment strips (B) are pointing in the same direction.

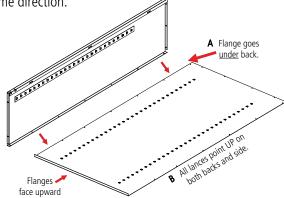


4. Attach the top (Ref. No. 5) to the unit by sliding the outer flange over the back of the unit and the side flange on the top over the side panel. The threaded studs should go

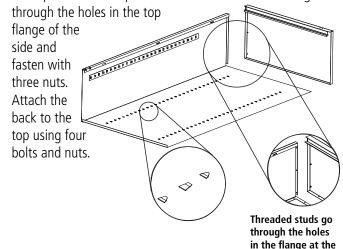


top of the side.


5. Attach the right side (Ref. No. 3) to the back in the same manner as you did in step 3, again, making sure that the flange is around the back and that the lances on the shelf adjustment strips are pointed in the same direction as those on the back and left side. Push the side panel up so the studs in the top go

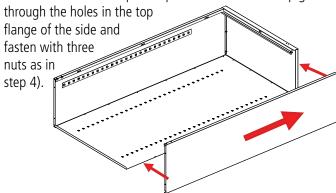


6. Attach the sill (Ref. No. 6) to the sides. Place nuts loosely on each of the studs and slide the ends of the sill into the slots on both sides of the unit. Then, securely tighten the nuts.

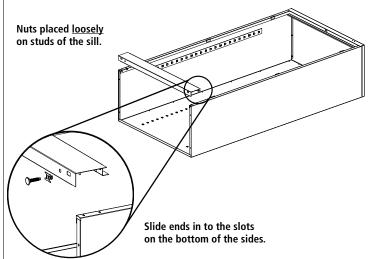


7. Place the rear flange of the bottom (Ref. No. 7) into the bottom lances of the back. The flange with two holes should face the front, hanging over the sill. Insert the bolts through

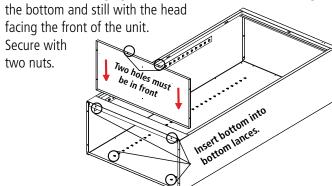

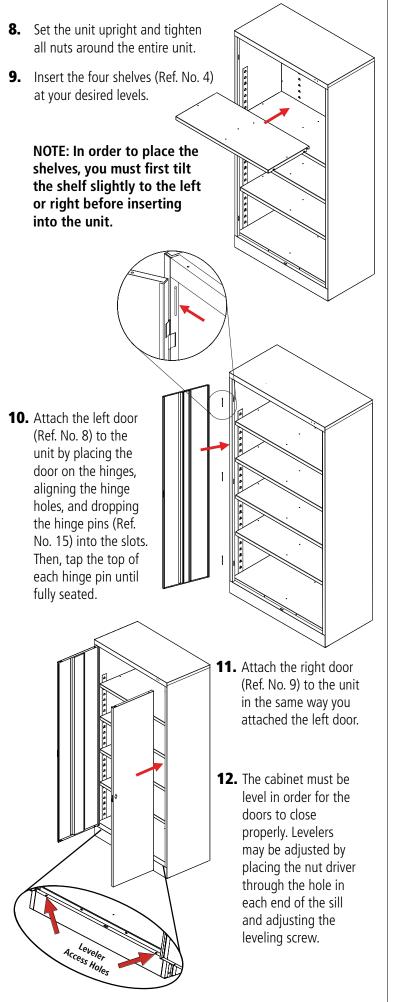


Handle/Locking System Installation


1. Place the locking handle (Ref. No. 9) on the right hand door and push it until it snaps into place. Then turn the handle to the open position. The latch should be facing downward as shown.

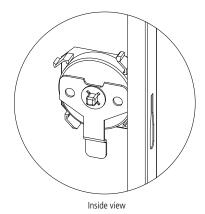



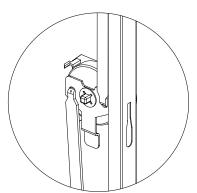

 
2. With the handle still in the open position, hook the locking bars (Ref. No. 8) to the locking cam (Ref. No. 12).





4. Slide the nylon lock bar guide inserts (Ref. No. 11) over the lock bar ends and through the door slots. Push down firmly until the guides snap into place.

REPLACEMENT PARTS

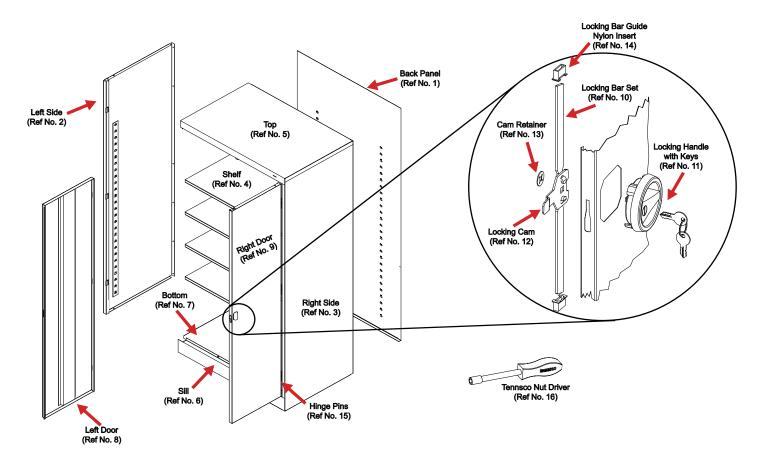

		1470RH (18"d Cabinet)		1480RH (24"d Cabinet)	
REF. NO.	DESCRIPTION	QTY.	PART NO.	QTY.	PART NO.
1	Back Panel	1	944BA	1	944BA
2	Left Side	1	944LS	1	292LS
3	Right Side	1	944RS	1	292RS
4	Shelf	4	301	4	302
5	Тор	1	944TON	1	292TO
6	Sill	1	944SIN	1	944SS
7	Bottom	1	944BO	1	292BO
8	Left Door	1	944LD	1	944LD
9	Right Door	1	944RD-RH	1	944RD-RH
10	Locking Bar Set	1	944LB	1	944LB
11	Recessed Locking Handle w/keys	1	RH-1	1	RH-1
12	Locking Cam*	1	944LC	1	944LC
13	Locking Bar Guide Insert (Nylon)	2	944GI	2	944GI
14	Cam Retainer*	1	944CR	1	944CR
15	Hinge Pins	6	944HP	6	944HP
16	Tennsco Nut Driver	1	TOOL-2	1	T00L-2
17	#8-32 x 3/8" bolts (not shown above)	20	**	20	**
18	#8-32 nuts (not shown above)	30	**	30	**

^{*}Included in Ref. No. 11, locking handle with keys and hardware (Part No. RH-1).

NOTE: Additional hardware may be included for replacement purposes.

^{**}Available Locally